

Table 2-13. Trouble Codes and Fault Conditions

RANKING	DTC	CHECK ENGINE LAMP CODE	FAULT CONDITION	SOLUTION
1	P0604	52	ECM RAM Failure	2.26 DTC P0603 (54), P0604 (52), P0605 (53), P0607 (55)
2	P0605	53	ECM ROM Failure	2.26 DTC P0603 (54), P0604 (52), P0605 (53), P0607 (55)
3	P0603	54	ECM EEPROM Failure	2.26 DTC P0603 (54), P0604 (52), P0605 (53), P0607 (55)
4	P0607	55	ECM Microprocessor Failure	2.26 DTC P0603 (54), P0604 (52), P0605 (53), P0607 (55)
5	P0339	56	Crankshaft Position Sensor Circuit Intermittent	2.22 DTC P0339 (56)
6	P0123	11	Throttle Position Sensor Circuit High	2.19 DTC P0122 (11), P0123 (11)
7	P0122	11	Throttle Position Sensor Circuit Low	2.19 DTC P0122 (11), P0123 (11)
8	P1502	45	Side Stand Sensor High/Open	2.34 DTC P1501 (45), P1502 (45), P1503 (45)
9	P1501	45	Side Stand Sensor Low	2.34 DTC P1501 (45), P1502 (45), P1503 (45)
10	P1503	45	Side Stand down at vehicle speed	2.34 DTC P1501 (45), P1502 (45), P1503 (45)
11	P1152	44	Bank Angle Sensor Shorted High	2.31 DTC P1151 (44), P1152 (44)