

RANKING	DTC	CHECK ENGINE LAMP CODE	FAULT CONDITION	SOLUTION
12	P1151	44	Bank Angle Sensor Shorted Low	2.31 DTC P1151 (44), P1152 (44)
13	P1154	26	Clutch Position Sensor Circuit Low	2.32 DTC P1154 (26), P1155 (27)
14	P1155	27	Neutral Switch Input Circuit Low	2.32 DTC P1154 (26), P1155 (27)
15	P0118	14	Engine Temperature Sensor High/Open	2.18 DTC P0117 (14), P0118 (14)
16	P0117	14	Engine Temperature Sensor Voltage Low	2.18 DTC P0117 (14), P0118 (14)
17	P0113	15	Intake Air Temperature Sensor High/Open	2.17 DTC P0112 (15), P0113 (15)
18	P0112	15	Intake Air Temperature Sensor Voltage Low	2.17 DTC P0112 (15), P0113 (15)
19	P0629	33	Fuel Pump Circuit High	2.28 DTC P0628 (33), P0629 (33)
20	P0628	33	Fuel Pump Circuit Low	2.28 DTC P0628 (33), P0629 (33)
21	P2301	24	Front Ignition Coil Control Circuit High	2.37 DTC P2300 (24), P2301 (24), P2303 (25), P2304 (25)
22	P2300	24	Front Ignition Coil Control Circuit Low	2.37 DTC P2300 (24), P2301 (24), P2303 (25), P2304 (25)
23	P2304	25	Rear Ignition Coil Control Circuit High	2.37 DTC P2300 (24), P2301 (24), P2303 (25), P2304 (25)
24	P2303	25	Rear Ignition Coil Control Circuit Low	2.37 DTC P2300 (24), P2301 (24), P2303 (25), P2304 (25)
25	P0262	23	Front Fuel Injector Circuit High	2.21 DTC P0261 (23), P0262 (23), P0264 (32), P0265 (32)
26	P0261	23	Front Fuel Injector Circuit Low	2.21 DTC P0261 (23), P0262 (23), P0264 (32), P0265 (32)
27	P0265	32	Rear Fuel Injector Circuit High	2.21 DTC P0261 (23), P0262 (23), P0264 (32), P0265 (32)
28	P0264	32	Rear Fuel Injector Circuit High	2.21 DTC P0261 (23), P0262 (23), P0264 (32), P0265 (32)
29	P0563	16	Battery Voltage High	2.25 DTC P0562 (16), P0563 (16)
30	P0562	16	Battery Voltage Low	2.25 DTC P0562 (16), P0563 (16)
31	P0502	43	Vehicle Speed Sensor High	2.23 DTC P0502 (43), P0503 (43), P0608 (37)
32	P0503	43	Vehicle Speed Sensor Intermittent/Erratic High	2.23 DTC P0502 (43), P0503 (43), P0608 (37)
33	P1470	21	Exhaust Valve Actuator Stuck Open	2.33 DTC P1470 (21), P1471 (21), P1477 (21), P1478 (21)
34	P1478	21	Exhaust Valve Actuator High	2.33 DTC P1470 (21), P1471 (21), P1477 (21), P1478 (21)
35	P1471	21	Exhaust Valve Actuator Stuck Closed	2.33 DTC P1470 (21), P1471 (21), P1477 (21), P1478 (21)
36	P1477	21	Exhaust Actuator Low/Open	2.33 DTC P1470 (21), P1471 (21), P1477 (21), P1478 (21)
37	P0152	13	Oxygen Sensor Circuit High/Engine Rich	2.20 DTC P0151 (13), P0152 (11), P0154 (13)
38	P0154	13	Oxygen Sensor Open/Inactive	2.20 DTC P0151 (13), P0152 (11), P0154 (13)
39	P0151	13	Oxygen Sensor Circuit Low/Engine Lean	2.20 DTC P0151 (13), P0152 (11), P0154 (13)
40	P0511	34	Idle Air Control Circuit	2.24 DTC P0506 (34), P0507 (34), P0511 (34)